

Autonics

**COUNTER
F/L SERIES**



Thank you very much for selecting Autonics products.
For your safety, please read the following before using.

Caution for your safety

- *Please keep these instructions and review them before using this unit.
- *Please observe the cautions that follow:
- Warning** Serious injury may result if instructions are not followed.
- Caution** Product may be damaged, or injury may result if instructions are not followed.
- *The following is an explanation of the symbols used in the operation manual.
- Caution:** Injury or danger may occur under special conditions.


Warning

- In case of using this unit with machineries (Nuclear power control, medical equipment, vehicle, train, airplane, combustion apparatus, entertainment or safety device etc), it requires installing fail-safe device, or contact us for information required.**
It may result in serious damage, fire or human injury
- This unit must be mounted on Panel.**
It may give an electric shock.
- Do not connect terminals when it is power on.**
It may give an electric shock.
- Do not disassemble and modify this unit, when it requires. If needs, please contact us.**
It may give an electric shock and cause a fire.


Caution

- This unit shall not be used outdoors.**
It might shorten the life cycle of the product or give an electric shock.
- When wire connection, No.20AWG(0.50mm²) should be used and screw bolt on terminal block with 0.74N·m to 0.90N·m strength.**
It may result in malfunction or fire due to contact failure.
- Please observe specification rating.**
It might shorten the life cycle of the product and cause a fire.
- Do not use the load beyond rated switching capacity of Relay contact.**
It may cause insulation failure, contact melt, contact failure, relay broken, fire etc.
- In cleaning the unit, do not use water or an organic solvents.**
It might cause an electric shock or fire that will result in damage to the product.
- Do not use this unit at place where there are flammable or explosive gas, humidity, direct ray of the sun, radiant heat, vibration, impact etc.**
It may cause explosion.
- Do not inflow dust or wire dregs into inside of this unit.**
It may cause a fire or mechanical trouble.

Ordering information

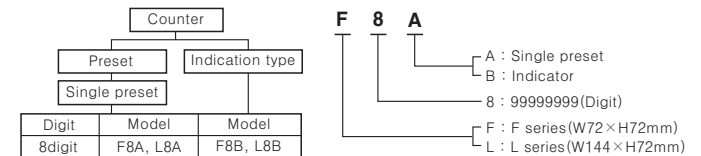

Panel cut-out

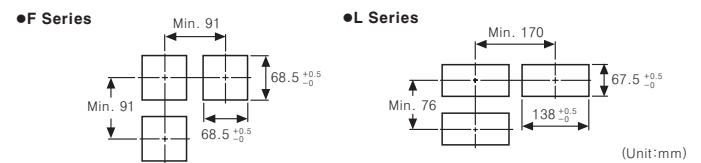

Input operation mode


| Input mode | SW1 | Counting chart | |
|------------------------------------|--------|--------------------|-----------------------|
| | | Voltage input type | No-voltage input type |
| Up/Down-A (Command input) | ON/OFF | [Timing diagram] | [Timing diagram] |
| Up/Down-B (Individual input) | ON/OFF | [Timing diagram] | [Timing diagram] |
| Up/Down-C (Phase difference input) | ON/OFF | [Timing diagram] | [Timing diagram] |
| Up (Up input) | ON/OFF | [Timing diagram] | [Timing diagram] |
| Up/Down-D (Command input) | ON/OFF | [Timing diagram] | [Timing diagram] |
| Up/Down-E (Individual input) | ON/OFF | [Timing diagram] | [Timing diagram] |
| Up/Down-F (Phase difference input) | ON/OFF | [Timing diagram] | [Timing diagram] |
| Down (Down input) | ON/OFF | [Timing diagram] | [Timing diagram] |

*A: Over Min. signal width, B: Over 1/2 of Min. signal width.
Counting miss by one(±1) is occurred if the signal width of A or B is less than min. signal width.
***The above specification are changeable without notice anytime.**


Specifications

| | | |
|----------------------------------|--|------------|
| Series | F | L |
| Digit | 8 | 8 |
| Model | Single preset: F8A Indication type: F8B | L8A L8B |
| Power supply | 100-240VAC 50/60Hz 12-24VDC 50/60Hz, 12-24VDC | |
| Allowable voltage range | 90 to 110% of rated voltage | |
| Power consumption | AC power: Indication: Approx. 5.4VA, Single preset: Approx. 6.1VA (240VAC 50/60Hz) AC/DC power: Indication: Approx. 5.5VA, Single preset: Approx. 6.3VA (24VAC 50/60Hz) Indication: Approx. 2.6W, Single preset: Approx. 3.1W (24VDC) | |
| Max. counting speed for CP1, CP2 | 1cps/30cps/2kcps/5kcps selectable by DIP switch | |
| Min. input signal width | RESET input: Min. 20ms | |
| Input method | CP1, CP2 input: Input logic is selectable [Voltage input] Input impedance is 5.4kΩ, "H" level: 5-30VDC, "L" level: 0-2VDC [No-voltage input] Short-circuit impedance: Max. 1kΩ, Residual voltage: Max. 2VDC, Open-circuit impedance: Min. 100kΩ | |
| Control output | Contact: Type: Single preset type: SPDT(1c) Capacity: 250VAC 3A resistive load Solid-state: Type: Single preset type: NPN open collector Rating: 30VDC Max. 100mA Max. | |
| Memory retention | 10 years (EEPROM) | |
| External power supply | 12VDC ±10% 50mA Max. | |
| Ambient temperature | -10 to 55°C (at non-freezing status) | |
| Storage temperature | -25 to 65°C (at non-freezing status) | |
| Ambient humidity | 35 to 85%RH | |
| Insulation resistance | 100MΩ (at 500VDC) | |
| Dielectric strength | 2000VAC 50/60Hz for 1 minute | |
| Noise immunity | AC power: ±2kV the square wave noise (pulse width: 1μs) by the noise simulator AC/DC power: ±500V the square wave noise (pulse width: 1μs) by the noise simulator | |
| Vibration | Mechanical: 0.75mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z directions for 1 hour Malfunction: 0.5mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z directions for 10 minutes | |
| Shock | Mechanical: 300m/s ² (Approx. 30G) 3 times at X, Y, Z direction Malfunction: 100m/s ² (Approx. 10G) 3 times at X, Y, Z direction | |
| Relay life cycle | Mechanical: Min. 10,000,000 times Electrical: Min. 100,000 times (250VAC 3A resistive load) | |
| Weight | F8A: Approx. 287g, F8B: Approx. 253g L8A: Approx. 500g, L8B: Approx. 446g | |


Input logic selection

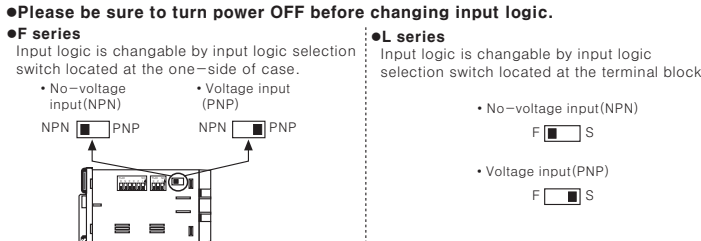

Case & DIP switch detachment

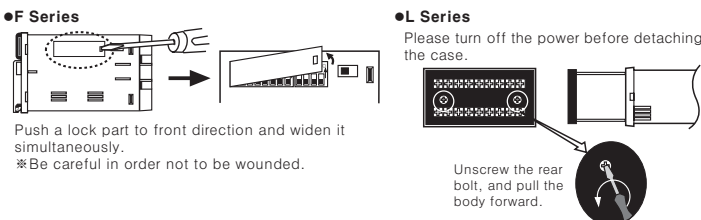


Connections

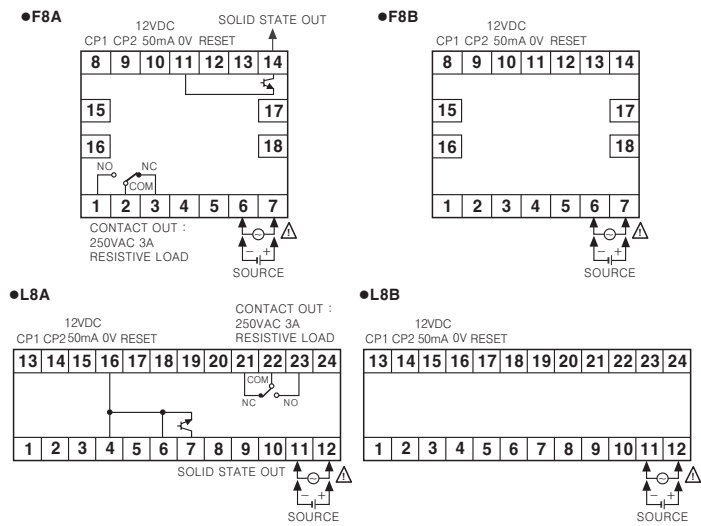


Output operation mode

| Output mode | Input mode | | Operation after Count up |
|-------------|---------------------|-----------------------|--|
| | Up, Up/Down-A, B, C | Down, Up/Down-D, E, F | |
| F | [Timing diagram] | [Timing diagram] | The display value continues until reset signal is applied and the output will be held. |
| N | [Timing diagram] | [Timing diagram] | The display value and hold output are held until reset signal is applied. |
| C | [Timing diagram] | [Timing diagram] | The display value returns to reset start status as soon as display value is reached to preset value. |
| R | [Timing diagram] | [Timing diagram] | The display value is held until output is OFF then returns to reset start status. |
| K | [Timing diagram] | [Timing diagram] | The display value continues until reset signal is applied. |
| P | [Timing diagram] | [Timing diagram] | The display value is held during one-shot output time, counting process is returned to reset start status as soon as output is ON. |
| Q | [Timing diagram] | [Timing diagram] | The display value continues during one-shot output time. |
| S | [Timing diagram] | [Timing diagram] | Up, Up/Down-A, B, C input mode - Output is ON when (Display value) ≥ (Preset value) Down, Up/Down-D, E, F input mode - Output is ON when (Display value) ≤ (Zero) |


Input connection

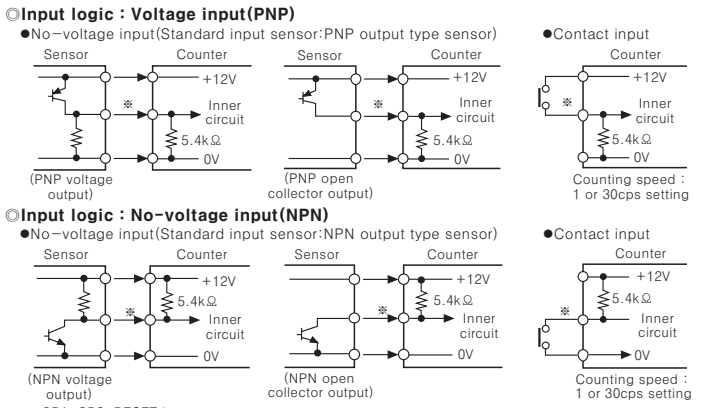


Input-Output connection

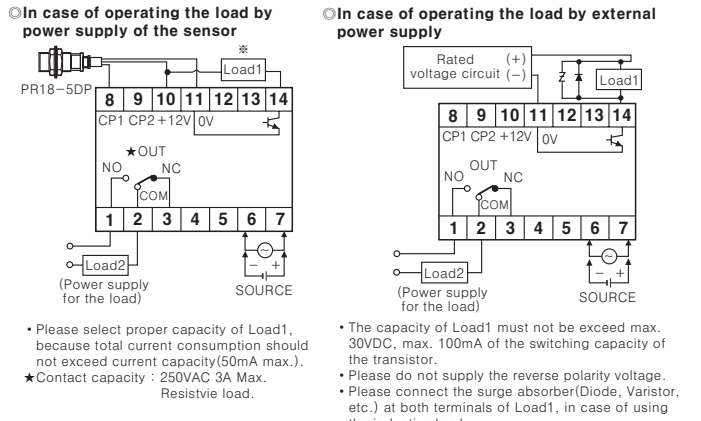


Selection by DIP switches

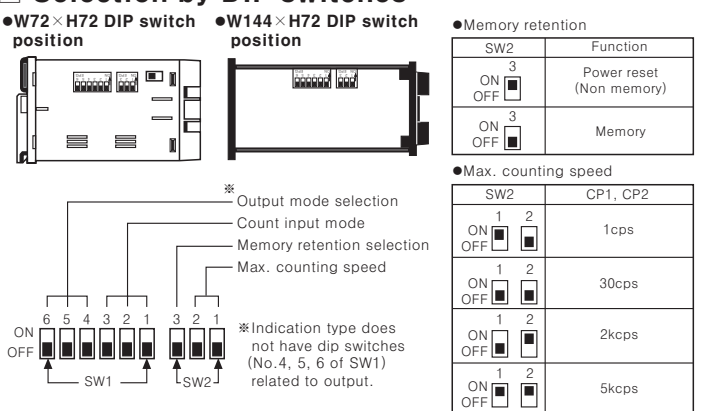

Counting operation of indication model

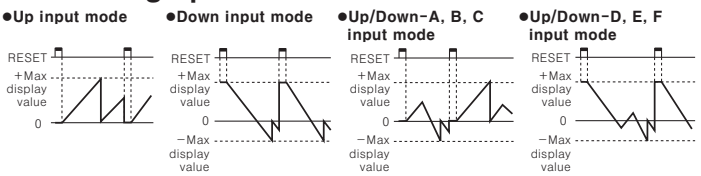

Decimal point setting

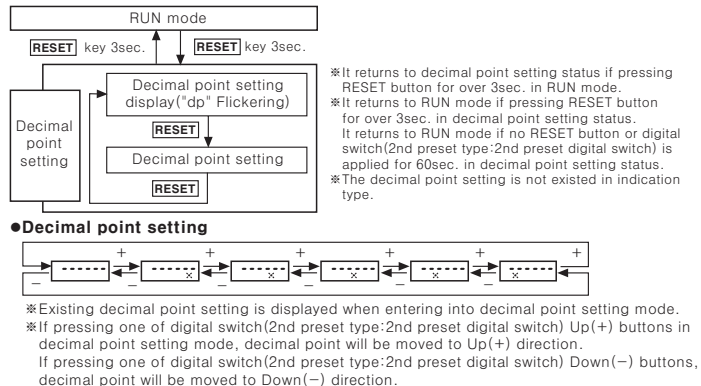

Caution for using

- DIP switch setting: Please be sure to turn power OFF before changing Counter DIP switches setting. If DIP switches setting is changed in power OFF, Counter must be reset by manual reset or external reset after power ON.
- Error: [Error display table]
- Power: [Power timing diagram]
- Input signal line: [Input signal line precautions]
- When test dielectric voltage and insulation resistance of the control panel with this unit installed. [Insulation test precautions]
- Do not use this unit at below places. [Installation location precautions]
- Installation environment: [Environment precautions]

Main products

Autonics Corporation
http://www.autonics.com

Satisfiable Partner For Factory Automation

HEADQUARTERS: 41-5, Yongdang-ni, Ungsang-eup, Yangsan-si, Gyeongnam, 626-847, Korea
INTERNATIONAL SALES: Bldg. 402 3rd Fl., Bucheon Techno Park, 193, Yakdae-dong, Wornm-gu, Bucheon-si, Gyeonggi-do, 420-734, Korea
TEL: 82-32-610-2730 / FAX: 82-32-329-0728
E-mail: sales@autonics.net

EP-KE-01-032C