

Autonics

**PANEL METER
MT4Y SERIES**

M A N U A L



Thank you very much for selecting Autonics products.
For your safety, please read the following before using.

Caution for your safety

- Please keep these instructions and review them before using this unit.
- Please observe the cautions that follow:
- Warning** Serious injury may result if instructions are not followed.
- Caution** Product may be damaged, or injury may result if instructions are not followed.
- The following is an explanation of the symbols used in the operation manual.
- caution: Injury or danger may occur under special conditions.


Warning

- In case of using this unit with machinery (Nuclear power control, medical equipment, vehicle, train, airplane, combustion apparatus, entertainment or safety device etc.), it is required to install fail-safe device. It may result in serious damage, fire or human injury.
- It must be mounted on Panel. It may give an electric shock.
- Do not connect, inspect and repair terminals when it is power on. It may give an electric shock.
- Do not disassemble and modify this unit, when it is required. Please contact us. It may cause an electric shock and a fire.
- Please check the number of terminal when connecting power line or measuring input. It may cause a fire.

Caution


- This unit shall not be used outdoors. It might shorten the life cycle of the product or give an electric shock.
- When connecting wire, No.20AWG(0.50mm²) should be used and tighten screw bolt on terminal block with 0.74N·m to 0.90N·m strength. It may cause a malfunction or fire due to contact failure.
- Please observe the rated specification. It might shorten the life cycle of the product and cause a fire.
- Do not use beyond of the rated switching capacity of Relay contact. It may cause insulation failure, contact melt, contact failure, relay broken and fire etc.
- In cleaning the unit, do not use water or an oil-based detergent. It might cause an electric shock or fire.
- Do not use this unit in place where there are flammable or explosive gas, humidity, direct ray the sun, radiant heat, vibration and impact etc. It may cause a fire or explosion.
- Do not inflow dust or wire dregs into the unit. It may cause a fire or mechanical malfunction.
- Please connect properly after checking the polarity of measuring terminals. It may cause a fire or explosion.

Front panel identification

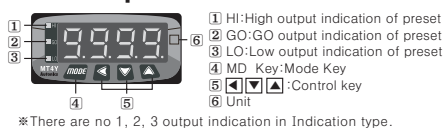


*There are no 1, 2, 3 output indication in Indication type.


Panel cut-out

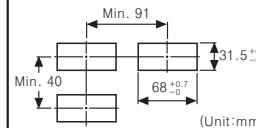


Terminal connection

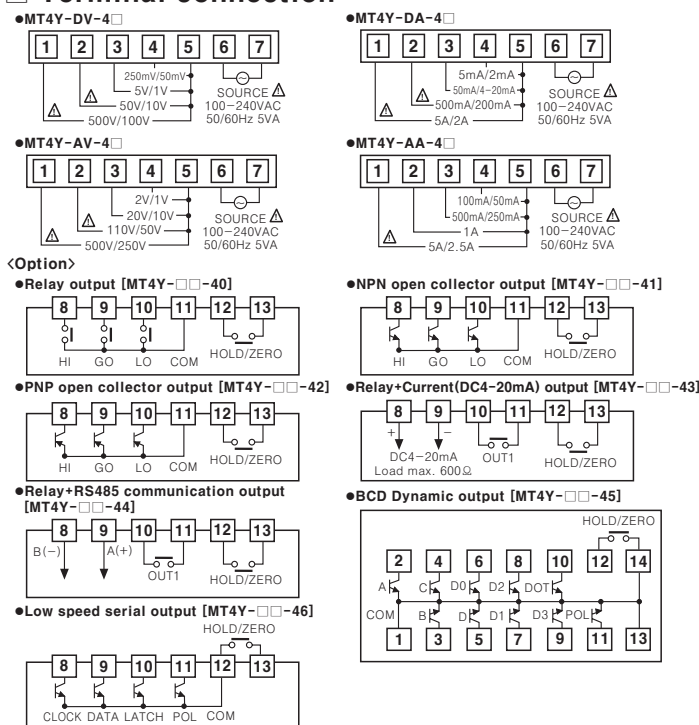

Time chart of Low-speed serial output and BCD output

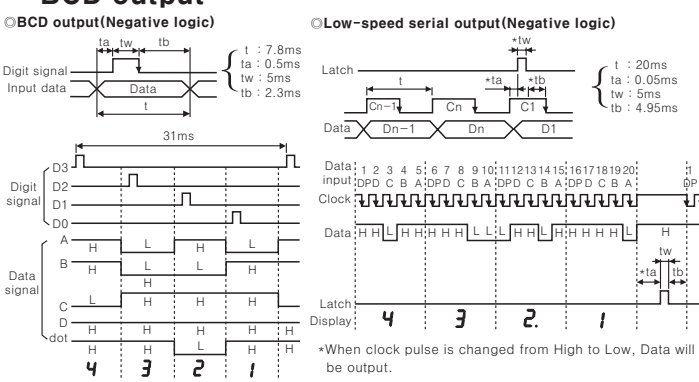

Prescale function [PA1: H-5C/L-5C mode]

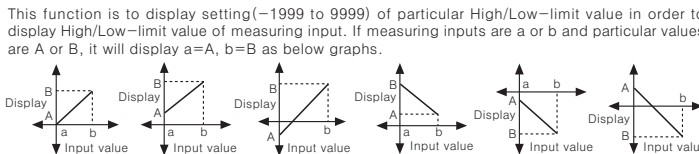

Error display function

Display	Description
HHHH	Measuring input exceeds available max. input range: 110% F · S
LLLL	Measuring input exceeds available min. input range: -10% F · S
d-HH	Display value for measuring input exceeds max. display range: 9999
d-LL	Display value for measuring input exceeds min. display range: -1999
F-HH	Display value for measuring frequency exceeds max. measuring range: 9999
ovEr	Exceeds zero adjusting range: ±99

* "LLLL" is only for 4-20mA input terminal of MT4Y-DA.
* Zero adjusting error is returning to measuring mode after "ovEr" is flickering 2 times.
* Refer to "Measuring AC frequency function" for frequency measuring range.
* The above specifications are changeable at anytime without notice.

Specifications

Series		MT4Y
Power supply		100~240VAC 50/60Hz(90 to 110% of rated voltage)
Power consumption		5VA
Display method		7Segment LED Display (Red)
Display accuracy	23°C ±5°C 35~85%RH -10°C~50°C	DC Type: Voltage/Current: ±0.1% F.S. ±2Digit AC Type: Voltage/Current: ±0.3% F.S. ±3Digit, Frequency: ±0.1% F.S. ±2Digit When ±0.3% F.S. ±3Digit only for 5A terminal of MT4Y-DA, AA Type DC/AC Type: Voltage/Current: ±0.5% F.S. ±3Digit, Frequency: ±0.6% F.S. ±2Digit
Input		DC Voltage/Current, AC Voltage/Current, AC Frequency
Max. allowable input		110% for input spec.
A/D conversion method		Practical Over sampling using successive approximation ADC
Sampling cycle		50ms(DC), 16.6ms(AC 60Hz) (1/12,000)
Max. indication range		-1999 ~ 9999(4Digit)
Max. input		110% for input spec.
Preset output		Relay output: Contact capacity: 250VAC 3A, 30VDC 3A/Contact composition: N.O(1a) NPN/PNP Open Collector output: 12~24VDC ±2V 50mA Max. (Load resistance)
Sub output (Transmission output)		RS485 communication output: Baud rate: 1200/2400/4800/9600, Transmission method: 2 wires half duplex, Transmission code: ASCII Code(8Bit), Tuning method: Sub-synchronization, Protocol: Modbus type Serial/BCD output: NPN Open collector output, 12~24VDC Max. 50mA (Resistive load) DC4-20mA output: Resolution: 8000 division (Load resistance max. 600Ω)
AC measuring function		Selectable RMS or AVG
Frequency measuring function		Measurement range: 0.100~9999Hz (Fixed decimal point type)
Hold function		Built-in (Outer hold function)
Ambient temperature		-10 ~ 50°C (at non-freezing status)
Storage temperature		-20 ~ 60°C (at non-freezing status)
Ambient humidity		35 ~ 85%RH
Approval		CE, RoHS

Specification and range

Type	Measuring input and range	Input impedance	Standard [5end]	Prescale [SCAL]
DC Volt	0~500V [500]	4.33315MΩ	0.0~500.0(Fixed)	
	0~100V [100]	4.33315MΩ	0.0~100.0(Fixed)	
	0~50V [50]	433.15kΩ	0.0~50.0(Fixed)	
	0~10V [10]	43.15kΩ	0.0~10.0(Fixed)	
	0~5V [5]	4.315kΩ	0.00~5.000(Fixed)	
	0~1V [1]	431.5Ω	0.000~1.000(Fixed)	
	0~250mV [0.25]	2.15kΩ	0.00~250.0(Fixed)	
	0~50mV [0.05]	2.15kΩ	0.00~50.00(Fixed)	
	0~5A [5]	0.01Ω	0.000~5.000(Fixed)	-1999~9999(Variable)
	0~2A [2]	0.01Ω	0.000~2.000(Fixed)	-1999~9999(Variable)
DC Ampere	0~500mA [0.5]	0.1Ω	0.0~500.0(Fixed)	
	0~200mA [0.2]	0.1Ω	0.0~200.0(Fixed)	
	0~50mA [0.05]	1.0Ω	0.00~50.00(Fixed)	
	4~20mA [0.02]	1.0Ω	0.00~20.00(Fixed)	
	0~5mA [5]	10.0Ω	0.000~5.000(Fixed)	
	0~2mA [2]	10.0Ω	0.000~2.000(Fixed)	
	0~500V [500]	4.9877MΩ	0.0~500.0(Fixed)	
	0~250V [250]	4.9877MΩ	0.0~250.0(Fixed)	
	0~110V [110]	1.0877MΩ	0.0~440.0(Fixed)	
	0~50V [50]	1.0877MΩ	0.00~50.00(Fixed)	
AC Volt	0~20V [20]	200kΩ	0.00~20.00(Fixed)	
	0~10V [10]	20kΩ	0.00~10.00(Fixed)	
	0~2V [2]	20kΩ	0.000~2.000(Fixed)	
	0~1V [1]	20kΩ	0.000~1.000(Fixed)	
	0~5A [5]	0.01Ω	0.000~5.000(Fixed)	
	0~2.5A [2.5]	0.01Ω	0.000~2.500(Fixed)	
	0~1A [1]	0.05Ω	0.000~1.000(Fixed)	
	0~500mA [0.5]	0.1Ω	0.0~500.0(Fixed)	
	0~250mA [0.25]	0.1Ω	0.00~250.0(Fixed)	
	0~100mA [0.1]	0.5Ω	0.00~100.0(Fixed)	
AC Ampere	0~50mA [0.05]	0.5Ω	0.00~50.0(Fixed)	
	0~20mA [0.02]	0.5Ω	0.00~20.0(Fixed)	
	0~5mA [5]	10.0Ω	0.000~5.000(Fixed)	
	0~2mA [2]	10.0Ω	0.000~2.000(Fixed)	
	0~500V [500]	4.9877MΩ	0.0~500.0(Fixed)	
	0~250V [250]	4.9877MΩ	0.0~250.0(Fixed)	
	0~110V [110]	1.0877MΩ	0.0~440.0(Fixed)	
	0~50V [50]	1.0877MΩ	0.00~50.00(Fixed)	
	0~20V [20]	200kΩ	0.00~20.00(Fixed)	
	0~10V [10]	20kΩ	0.00~10.00(Fixed)	

(Display point will be changed according to decimal point position.)

* Please connect proper terminal with max. input voltage in 30~100% of the input voltage. When it is bigger than input voltage, it causes the terminal breakdown and over-range indication. The accuracy is decreased when it is connected to the terminal under 30%.

Display cycle delay function [PA 2 : d15t mode]

It is difficult to read display value, in case, measuring input value is fluctuated frequently, it is also changed. In this case, it is able to make display value stable by delaying display cycle. Display cycle displaying time can be changed in d15t mode of Parameter 2.
If selecting 4.0s, the display value is displayed every 4sec. averaging input value for 4sec.

Monitoring function for Peak display value [PA 0 : HPEL/LPEL mode, PA 2 : PEEL mode]

It observes Max./Min. value of display value by current display value and then display the data in HPEL mode and LPEL mode of parameter 0. Set delay time (0 to 30sec.) in PEEL mode of parameter 2 in order to prevent malfunction caused by initial over current or over voltage, when monitoring the peak value. Delay time is 0~30sec. and it will monitor the peak value after setting time. If pressing [PEEL] key at HPEL and LPEL mode of parameter 0, it will be initialized.
* Monitoring function is not indicated when setting the PE.t of parameter 2 as "0".

Initialization function

It initializes parameter setting state. When pressing [PEEL] key over 5 seconds at the same time in measuring mode, former changed state is canceled and it changes as initial state.

Current output (DC4~20mA) Scale adjustment function [PA 2 : FS-H / FS-L mode]

It set current output for preset indication value at the output current DC4~20mA. It set output indication value for 4mA and 20mA. Min. setting range between FS-H(FS-H) and FS-L(FS-L) is 10% F · S. (When it set as under 10% F · S, it changed as over 10% F · S automatically.) Preset indication value is outputted fixedly as 4mA at under FS-L and 20mA at over FS-H.

Error correction function [PA 1 : InbH / InbL mode]

This function is for correcting display value error of measuring input.
InbL: ±99(Adjust deviation of Low value), InbH: 5.000 to 0.100(Correct gradient(% of High value))
Display value = (Measuring value × InbH) + InbL
When the user desires measuring input specification is 0 to 500V and display value is 0 to 500.0, it is able to remove the offset of Low display value to set -12(Offset correcting value) in InbL. (When Low display value is "0.12" in 0V input)
Display value for measuring input(500V) is decided by offset adjustment of low value. In case display value is "501.0" display value will be 500.0 by adjusting the gradient of high display value by 0.998 of correcting value is set at InbH by calculating 500.0 / 501.1 (Target display value/Current display value)
* The offset correction range of InbL is within -99 to +99 for D=9, D=1 digit regardless of decimal point.

Zero adjustment function [PA 1 : InbH mode]

It sets the preset indication value as zero when min. input is supplied into the measuring terminal, zero error can be adjusted with 3 ways as below.
When zero adjustment adjustment with front key and Hold terminal is finished normally, zero of measuring terminal is displayed and the adjusted value is saved in InbL automatically.

Gradient correction function [PA 1 : InbH mode]


This function is to correct a gradient of prescale value and display value. (Picture 1) Display value Y can be used as α, β times against X input value by correction function InbH. And also can be used as correction function of max. display value (H-5C). Adjustment range is 0.100 to 5.000 and multiply current gradient.
Ex) Input: 200mVDC, Display: 3.000 for MT4Y-DV type
① Select 0~1VDC for measuring input in Parameter 1.
② Standard specification in input: 0~1VDC and 1.000 therefore it has to be 15.000 (H-5C for 1VDC(Input) in order to display 3.000 for 200mVDC(Input).
③ It is unable due to setting range is 9.999
④ In this case, please check below chart.
Please set as InbH × H-5C = 15.000

Setting method	H-5C	L-5C	InbH	Remark
①	Unavailable to set	0.000	1.000	
②	7.500	0.000	2.000	It will be same display value
③	5.000	0.000	3.000	whichever user choose the method
④	3.750	0.000	4.000	
⑤	3.000	0.000	5.000	among setting ways.


Parameter

Parameter	Display	Function	Note
In-r	Input type	Selectable RMS/AVG in AC type	Indication in AC type only
In-r	Input range	Selection of input range	
d15P	Display	Selection of display type	Selectable 5end / SCAL / FrE9
5end	Standard	Standard scale range	Display Max. display value of 5end
FrE9	Frequency	Frequency display	
SCAL	Scale	Scale range	It is displayed at SCAL, sets max. display value/min. display value (-1999 to 9999)
H-5C	High scale	Set max. value of display range	
L-5C	Low scale	Set min. value of display range	
dot	Dot	Set Dot position	Display only SCAL/FrE9 describe position
InbH	input bias high	Correct High-limit value of display value	5end/SCAL/Correction range 0.100~5.000 FrE9/Correction range 0.100~9.999
InbL	input bias low	Correct Low-limit value of display value	Set range: -99 to +99
InbE	input bias exponent	Set display index of frequency mode	Set range: 10 ⁻² / 10 ⁻¹ / 10 ⁰ / 10 ¹
ouEt	Out type	Set operation mode of preset output	Selectable oFF/L.St/H.St/LH.St/HH.St/L.L/St/Ld.St
HYS	Hysteresis	Set hysteresis value	Setting range: 1 ~ 10% F · S
PEEL	Peak time	Set monitoring delay time for peak value(sec)	Setting range: 00sec ~ 30sec
d15t	Display time	Set sampling time(sec.)	Variable by 0.1sec unit of 0.1~5.0sec
εro	Zero Key	Set usage of front side zero adjustment key	No: Set usage of front side zero adjustment key Yes: Usage of front side zero adjustment key
Eu In	Event Input	Set external terminal(12, 13) function	Hold: Use external terminal as Hold terminal Zero: Use external terminal as zero point adjustment terminal
FS-H	Full scale High	Set the upper value output point or PV output	Min. set range: Min. 10% F · S
FS-L	Full scale Low	Set the lower value output point or PV output	Max. set range: Max. FS-H 10%
Ad-S	Address	Set communication address	Set range: 01 to 99
bPS	Bit per second	Set baudrate(bps)	Selectable 1200/2400/4800/9600
LoC	Lock	Set lock function	Selectable oFF/Loc1/Loc2/Loc3
HSE	High set	Set High setting value	Setting range: Set within indication range of 5end/SCAL
LSE	Low set	Set Low setting value	
HPEL	High peak	Max. value by data monitoring	Return to initial status by pressing [PEEL] key
LPEL	Low peak	Min. value by data monitoring	


Parameter setting

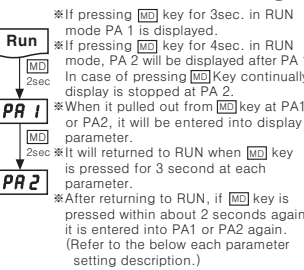


Parameter 0

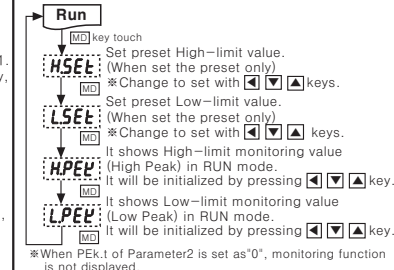

Parameter 1

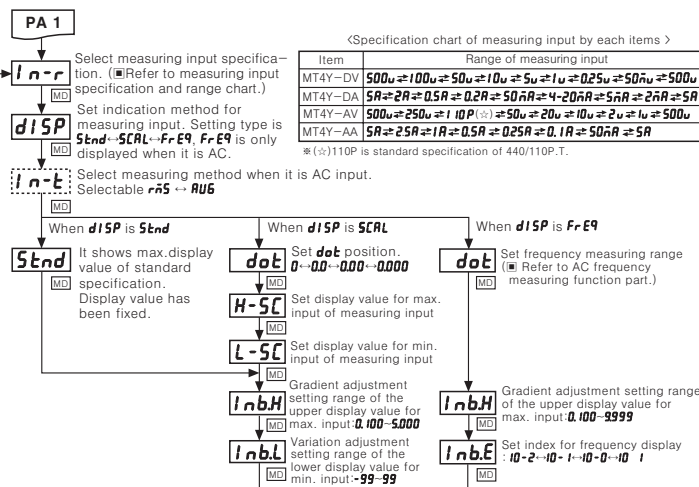

Parameter 2

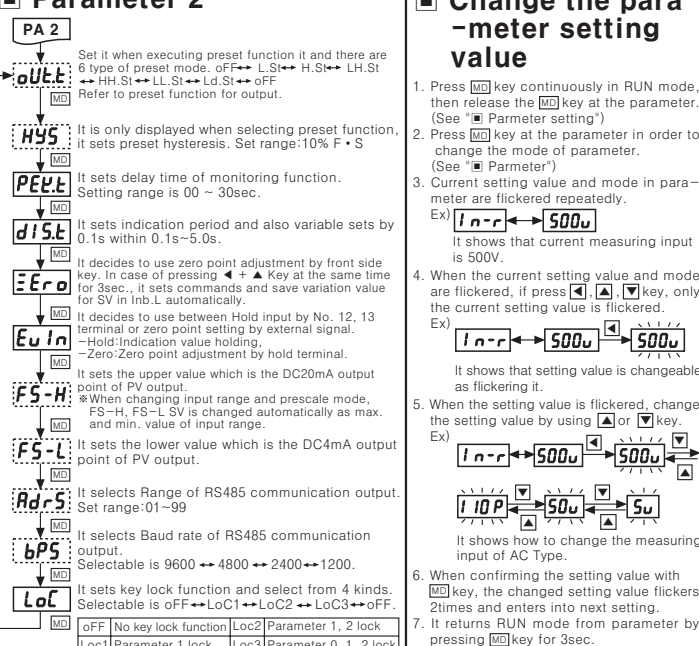

Change the parameter setting value

- Press [PEEL] key continuously in RUN mode, then release the [PEEL] key at the parameter. (See "Parameter setting")
- Press [PEEL] key at the parameter in order to change the mode of parameter. (See "Parameter")
- Current setting value and mode in parameter are flickered repeatedly. Ex) [In-r] → [500] It shows that current measuring input is 500V.
- When the current setting value and mode are flickered, if press [PEEL] key, only the current setting value is flickered. Ex) [In-r] → [500] → [500] It shows that setting value is changeable as flickering it.
- When the setting value is flickering, change the setting value by using [▲] or [▼] key. Ex) [10P] → [50] → [5] It shows how to change the measuring input of AC Type.
- When confirming the setting value with [PEEL] key, the changed setting value flickers 2 times and enters into next setting.
- It returns RUN mode from parameter by pressing [PEEL] key for 3sec.

Caution for using

- Allowable installation environment
 - ① Shall be used indoor
 - ② Pollution Degree 2
 - ③ Altitude Max. 2000m
 - ④ Installation Category II
 - Please use the terminal(M3.5, Max. 7.2mm) when connecting the AC power supply.
 - Please use separated line from high voltage line or power line in order to avoid inductive noise.
 - Please install power switch or circuit breaker in order to cut off the power supply.
 - The switch or circuit breaker should be installed near by users for safety.
 - Be sure to avoid using this unit near by machinery making strong high frequency noise. (High frequency welder & Sewing machine, High capacity SCR unit etc.)
 - When input is applied, if "HHHH" or "LLLL" are displayed, there are some problem with measuring input, please check the line after power off.
 - Noise inflowing from power line can cause serious problem for DPM driving by AC power supply. Even though there is condenser for protecting noise between lines at primary side of power transformer, but it is very difficult to install protection components at small size product like DPM. Therefore, please use noise absorber circuit such as line filter, varistor in external lines when voltage failure is occurred by power relay, magnet S/W and high frequency equipment are operated in same line or surge is occurred by spark of high voltage or thunder etc.
 - Input line: Shield wire must be used when the measuring input line is getting longer in the place occurring lots of noise.
- * It may cause malfunction if above instructions are not followed.

Major products

- PROXIMITY SENSOR
- PHOTOELECTRIC SENSOR
- AREA SENSOR
- FIBER OPTIC SENSOR
- DOOR/DOOR STOP SENSOR
- PRESSURE SENSOR
- ROTARY ENCODER
- SENSOR CONTROLLER
- SWITCHING POWER SUPPLY
- TEMPERATURE CONTROLLER
- TEMPERATURE/HUMIDITY TRANSDUCER
- POWER CONTROLLER
- RECORDER
- TACHOMETER/PULSE(RATE) METER
- PANEL METER
- INDICATOR
- SIGNAL CONVERTOR
- COUNTER
- TIME/TEMP DISPLAY UNIT
- GRAPHIC PANEL
- STEP MOTOR & DRIVER
- MOTION CONTROLLER
- LASER MARKING SYSTEM(CO₂, Nd:YAG)

Autonics Corporation
http://www.autonics.com

Satisfiable Partner For Factory Automation

HEADQUARTERS:
41-5, Yongdang-dong, Yangsan-si, Gyeongsang, 626-847, Korea

OVERSEAS SALES:
Bldg. 402 3rd Fl., Bucheon Techno Park, 193, Yaldae-da, Bucheon-si, Gyeonggi-do, 420-734, Korea
Wong-pu, Bucheon-si, Gyeonggi-do, 420-734, Korea
Tel: 82-32-610-2730 / FAX: 82-32-329-0728
E-mail: sales@autonics.com

EP-KE-77-0008C